



ASSEMBLY INSTRUCTIONS Model 98-B10P CEILING FIXTURE

CAUTION: A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT MUST INSTALL THIS FIXTURE IN ACCORDANCE WITH ALL APPLICABLE LOCAL CODES AND WITH FULL KNOWLEDGE OF THE HAZARDS INVOLVED.

WARNING: THE ELECTRICITY MUST BE DISCONNECTED AT THE MAIN FUSE BOX OR CIRCUIT BREAKER PANEL BEFORE INSTALLATION OF THIS CEILING FIXTURE – TURNING THE POWER OFF USING THE LIGHT SWITCH IS NOT SUFFICIENT TO PREVENT ELECTRICAL SHOCK. THIS CEILING FIXTURE IS NOT DESIGNED TO SUPPORT EXTERNAL WEIGHT OTHER THAN THE LAMP SHADES THAT IT IS PROVIDED WITH.

Locate the four (4) attachment screws on the side of the fixture. Loosen screws to release the mounting backplate. Find the package of ten (10) plastic retainers and set aside. These will be used later to secure the pendants.

Attach the mounting backplate directly to the ceiling using screw anchors.

Feed each pendant wire up from the bottom of the stainless steel plate and secure at the desired height with plastic retainer. Route each pendant wire through the corresponding port in the central housing and connect to the supply wires. Secure connections with wire nuts and electrical tape.

Push fixture onto mounting backplate and tighten the four (4) side screws securely.

