



## Assembly Instructions - 98-B801/RD/5 (MULTIPOINT CANOPY)

Begin by threading each pendant's electrical wire up through the underside of the ceiling mount fixture. Set the desired length for each pendant and tighten the plastic setscrew.

Special note: Some glass shades cannot be fitted to their respective pendant sockets after the ceiling mount fixture is installed in the ceiling. These shades must be attached to the pendant socket first, before installing the fixture. Please exercise extreme care by securely wrapping both the glass shade and the pendant socket assembly with protective cushioning material. This will help prevent damaging the shades during installation.

Next, make sure that electrical power has been disconnected at the circuit breaker panel prior to working with the ceiling electrical box. Be certain to follow all applicable electrical codes when installing this lighting fixture.

Secure the backplate to the junction box with the supplied screws. Once the electrical wiring is completed, position the ceiling mount over the backplate and secure with the three (3) screws on the side. Be sure to tuck under or cut any excess wire before tightening the ceiling mount fixture to the backplate. Reconnect the electrical power.

